TECHNICAL INFORMATION

Machine Type	**All Necta drinks machines**	**Model**	**All Versions**	**T.I. Number:**	
				Date: May 2005	
Part numbers				**Approved By Italy**	
Subject	How to reset the Anti Flood Valve			**ISSUED FOR CUSTOMER**	
				ACTION	
				INFORMATION	**X**

OVERFLOW DEVICE

The water inlet solenoid valve is equipped with an overflow device which mechanically stops the water flow if there is a malfunction in the solenoid valve or in the boiler water level float.

To restore normal operation of the solenoid valve do as follows:

- shut off the external tap;
- drain the solenoid valve reservoir by disconnecting the overflow hose (1);
- loosen the water supply pipe nut to relieve the residual pressure (2);
- re-tighten the nut, switch the machine on and reopen the external tap.

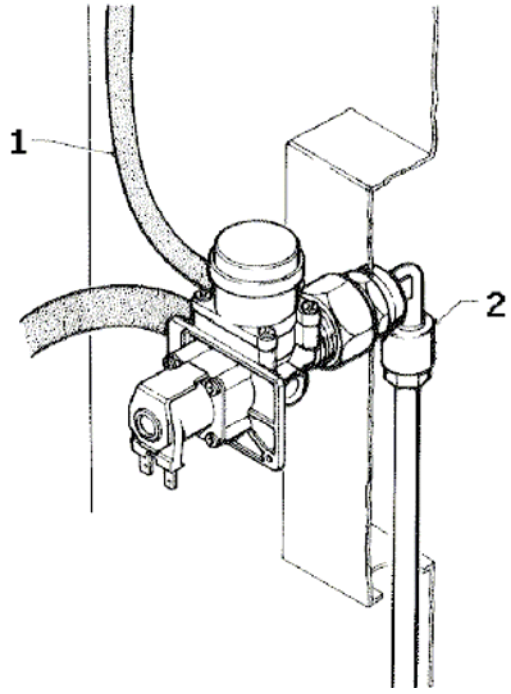

h